



**\*\*Note\*\*** The EASY 2200 unit active output (pins 13&14) should be programmed as Backstop and Normally Open circuit (tick box empty).

Aux In (21\_22)  
Panic

Activation(13\_14)  
Backstop  
 N/C  
 Latching

System fault (17\_18)  
Mains Failure excluded  
 N/C  
 Latching  
Fault Suppress  
 On

Aux Out (23\_24)  
MainsOk  
 N/C  
 Latching

\*\*\* Note \*\*\* Using PC tool change Activation (13-14) to “backstop” and uncheck the N/C box.  
Do not check the latching box.