



12V 0V

1	COM	■
2	DI0	■
3	DI1	■
4	DI2	■
5	DI3	■
6	DI4	■
7	DI5	■
8	GND	■
9	R0_NO	■
10	R0_C	■
11	R1_NO	■
12	R1_C	■
13	R2_NO	■
14	R2_C	■
15	R3_NO	■
16	R3_C	■
17	R4_NO	■
18	R4_C	■
19	R5_NO	■
20	R5_C	■

IP enabler settings
 DI0 = mains fail
 DI1 = Sys fault
 DI2 = Non Crit fault

R0 = Panic
 R1 = Set
 R2 = Trigger

IP Enabler